

Keypad Fingerprint Access Control User Manual

Please read the manual carefully before use this unit

1.Introduction

This series'product is a new generation of multi-function standalone access control. It adopts new ARM core 32-bit microprocessor design, which is powerful, stable and reliable. It contains reader mode and standalone access control mode etc.. It's widely applied to different occasions, such as office, residential communities, villa, bank and prison etc..

2.Features


Feature	Specification
Card Type	Read 125KHz EM Card and HID Card (Optional)
	Read 13.56MHz Mifare card and CPU card (Optional)
Keypad Characteristic	Metal backlight keypad
Output Way	Contain reader mode, the transmission format could be adjusted by user
Access Way	Support seven access ways
Admin Card	Support admin add card and admin delete card
User Capacity	10,000 card / pin users and 600 fingerprint users

3.Technical Specifications

Operating Voltage: DC 12-24V	Standby Current: ≤35mA
Operating Current: ≤100mA	Operating Temperature: -40°C~60°C
Operating Humidity: 0%~95%	Access ways: Fingerprint, card, code, or multiple combination methods

4.Installation

- Remove the back cover from the keypad using the supplied special screw driver
- Drill 2 holes on the wall for the self-tapping screws and 1 hole for the cable
- Put the supplied rubber bungs into the two holes
- Fix the back cover firmly on the wall with 2 self tapping screws
- Thread the cable through the cable hole
- Attach the keypad to the back cover. (See the figure below)

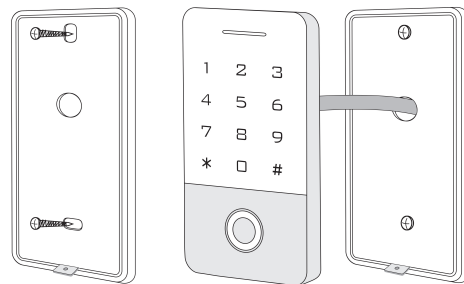


5.Wiring


No.	Color	Marks	Description
1	Green	D0	Wiegand input (Wiegand output as reader mode)
2	White	D1	Wiegand input (Wiegand output as reader mode)
3	Yellow	OPEN (BEEP)	Exit button input end (Beeper input as reader mode)
4	Red	+12V	Positive power supply or AC power supply end
5	Black	GND	Negative power supply
6	Blue	NO	Relay NO end
7	Purple	COM	Relay COM end
8	Orange	NC	Relay NC end

6.Diagram


6.1 Common Power Supply

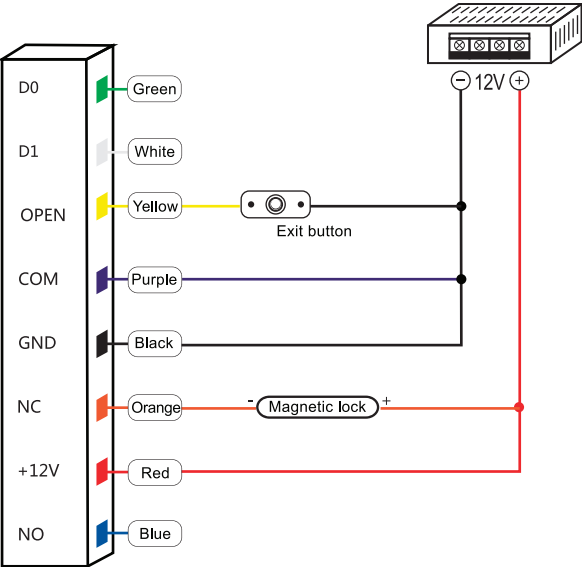

6.2 Special Power Supply

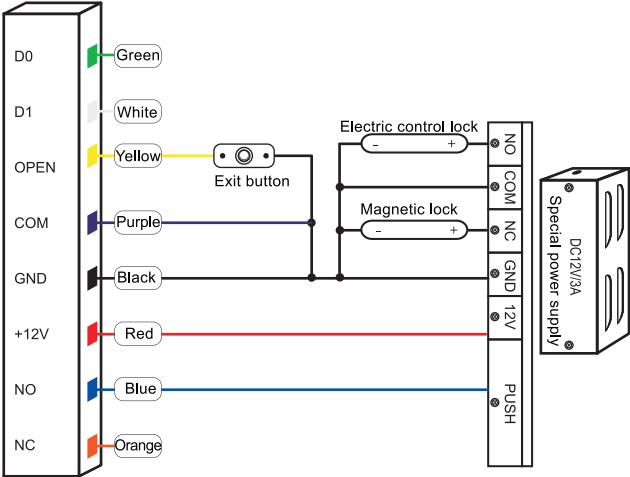

6.3 Reader Mode

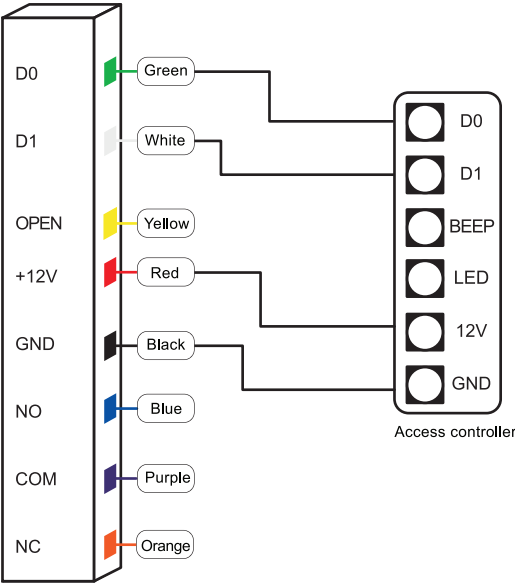

7.Sound and Light Indication

Operation Status	Light indicator	Buzzer
Stand by	Red	
Operation successful	Green	Beep—
Operation failed		Beep-Beep-Beep
Admin card enter programming		Beep-Beep
Admin card exit programming		Beep—
Press digital key		Beep
Press * key		Beep—
Press access code	Red indicator flash slowly	
Read card under card plus code mode	Red indicator flash slowly	
Read multi user cards	Red indicator flash slowly	
Enter programming mode	Red indicator flash slowly	
Enter setting status	Orange	
Unlocking	Green	
Buzzer alarm	Red indicator flash quickly	Alarm

8.Admin Menu

8.1 Standalone Mode Settings

Device Management

Enter programming	Menu	Operation steps	Description	Default value
Press * Admin code # (Default admin code is "999999")	00	New admin code # new admin code #	Change admin code	999999
	01	Read card / Input a fingerprint twice *	Set admin add card or admin add fingerprint	
	02	Read card / Input a fingerprint twice *	Set admin delete card or admin delete fingerprint	
	03	0#	Reader mode (Press * until heard di- sound and LED flashing to exit reader mode)	1
		1#	Standalone access control mode	
		2#	Relay toggle mode	
	08		WIFI matching	Optional
	09	Unlocking code # (4-6 digits)	Public code	

Add and Delete Users

Enter programming	Menu	Operation steps	Description	Default value
Press * Admin code # (Default admin code is "999999")	11	Read card / Input a fingerprint twice...	Add card users or fingerprint users continuously	"... " means repeating the previous operation, Press * key to exit.
		Press 8 or 10 digits card number # ... *	Add card users by card number	
		Press ID number # read card / Input a fingerprint twice ... *	Add card users or fingerprint users by specific ID number	
		Press ID number # press 8 or 10 digits card number # ... *	Add card users by specific ID number and card number	
		Press ID number # press code # ... *	Add an independent user code by specific ID number	
	12	Read user card, input the first fingerprint twice, input the second fingerprint twice...	Match fingerprints to a card (Maximum 2 fingerprints)	
		Press ID number # press 8 or 10 digits card number # input card quantity #	Add conductive number card	
	13			
	Delete users			
	21	Read card / Input a fingerprint once ... *	Delete card users by reading card / Delete fingerprint users by inputting fingerprint	"... " means repeating the previous operation, Press * key to exit.
		Press 8 or 10 digits card number #... *	Delete card users by card number	
		Press ID number # ... *	Delete users by ID number	
	20	0000#	Delete all users	

Access Ways

Enter programming	Menu	Operation steps	Description	Default value
Press * Admin code # (Default admin code is "999999")	31	0 #	Forbidden opening door	4
		1 #	Entry by code only	
		2 #	Entry by card only	
		3 #	Entry by card+ code or fingerprint + code	
		4 #	Entry by card, fingerprint or code	
		5 #	Entry by fingerprint only	
		6 #	Entry by fingerprint + card	
		7 #	Entry by multi-fingerprint / multi-card	
	32	1 #	Set door open by 1 user card/user fingerprint	1
		2-10 #	Set door open by 2-10 user cards/user fingerprints	

Advanced Settings

Enter programming	Menu	Operation steps	Description	Default value
Press * Admin code # (Default admin code is "999999")	41	(0-300) #	Door opening time range: 0-300S 0 equals to 50mS	5
	42	0 #	Alarming time sets 0S, means no alarm	0
		(1-99) #	Alarming time range: 1-99 min	
	61	0#	Normal working mode	0
		1#	The external alarm and built-in buzzer will work if wrong operations are over 5 times.	
		2#	The device will be locked out for 10 min if wrong operations are over 5 times.	
	62	0#	Disable light indicator	1
		1#	Enable light indicator	
	63	0#	Disable the keypad backlight	1
		1#	Enable the keypad backlight	
	64	(2-99) #	Time of keypad backlight: 2-99 sec	1
		0#	Disable buzzer	
		1#	Enable buzzer	

8.2 Reader Mode Settings

Enter programming	Menu	Operation steps	Description	Default value
Press * Admin code # (Default admin code is "999999")	00	New admin code # new admin code #	Change admin code	999999
	01	Read card / Input a fingerprint twice *	Set admin add card or admin add fingerprint	
	02	Read card / Input a fingerprint twice *	Set admin delete card or admin delete fingerprint	
	03	0#	Reader mode	1
		1#	Standalone access control mode	
		2#	Relay toggle mode	
Press * Admin code # (Default admin code is "999999")	11	Input a fingerprint twice, ...	Add fingerprint users continuously	"... " means repeating the previous operation, Press * key to exit.
		Press ID number # Input a fingerprint twice ...	Add fingerprint users by specific ID number	
	21	Input a fingerprint once ... *	Delete fingerprint users continuously	
		Press ID number # ... *	Delete users by the specific ID number	
	20	0000#	Delete ALL users	
	42	0#	Alarming time sets 0S, means no alarm	0
		(1-99)#	Alarming time range: 1-99 min	
		(0-255)#	Set device number	
	52	(26-58)#	Wiegand output: 26-58 bits	26
53	0#	Keypad transmission format 4 bits		0
	1#	Keypad transmission format 8 bits		
	2#	Virtual card number output		

9.Admin Card Operation

9.1 Add Card

Read admin add card Read the 1st user card Read the 2nd user card ... Read admin add card

Note: The add card is used to add card users continuously and quickly. When you read the admin add card at the first time, you will hear short "BEEP" sounds twice and the indicator light turns orange, it means you have entered into add user programming, when you read the admin add card at the second time, you will hear long "BEEP" sound once and the indicator light turns red, it means you have exited the add user programming.

9.2 Delete Card

Read admin delete card Read the 1st user card Read the 2nd user card ... Read admin delete card

Note: The delete card is used to delete card users continuously and quickly. When you read the admin delete card at the first time, you will hear short "BEEP" sounds twice and the indicator light turns orange, it means you have entered into delete user programming, when you read the admin delete card at the second time, you will hear long "BEEP" sound once, the indicator light turns red, it means you have exited the delete user programming.

10.User Operation

10.1 Change the User Code

Change the user code by card

Press * Read card Old code # New code # New code #

Note: The default code "1234" of matching card can't open the door unless revising other codes.

Change the user code by fingerprint

Press * Input fingerprint Old code # New code # New code #

Note: The default code "1234" of matching fingerprint can't open the door unless revising other codes.

Change the user code by ID number

Press * ID number # Old code # New code # New code #

Note: ID number has to be known from admin before changing the code, user code can't be default code "1234".

11 Other Operation

11.1 Remove Alarm

Read admin card or Read user card or Press admin code #

Note: When the alarm is activated, users can remove the alarm by reading a valid card or pressing admin code.

11.2 Reset to Factory Default

Users can reset to the factory default when the admin code is forgotten, or the default settings have been modified, operation as below:

Method 1: Power off, power on, press the # key when the indicator light turn orange,hearing beep sound twice, release the # key , the admin code has been reset to 999999, factory default settings is successful.

Method 2: Power off, press the exit button continuously, power on, hearing beep sound twice, the admin code has been reset to 999999, factory default settings are successful.

Note: Registered user data won't be deleted when reset to factory default.



Tuya App manual

- 1 Scan QR code to download Tuya APP or Search Tuya on App store to download it.



Scan QR code

OR




Search TuyaSmart to download APP




2

Open Tuya APP to add new equipment.

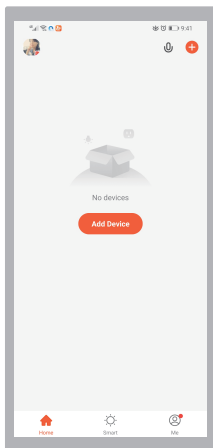


3

Select "Auto scan", click "Searching".

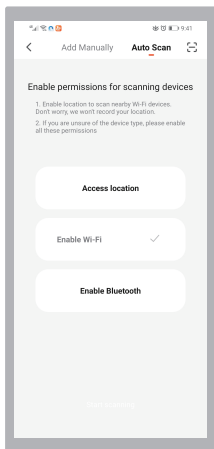


4

Connect with available devices, click “Next”.

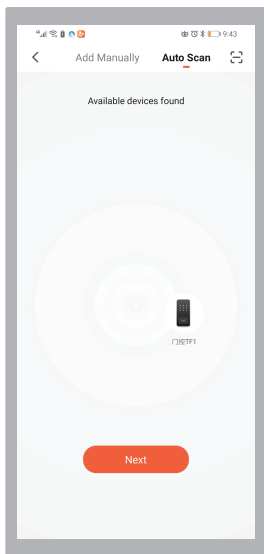


5


Choose Wi-Fi and enter password, click “Next”.

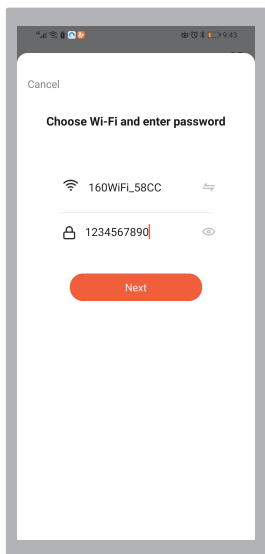


6 Connecting, Added successfully,click “Done”.

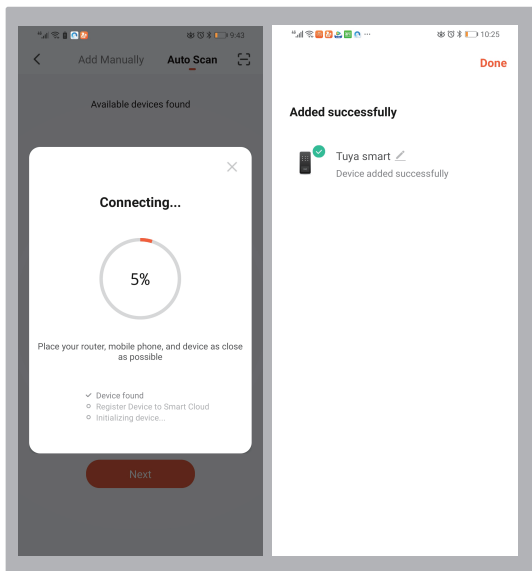

7 Click setting, open remote unlock setting

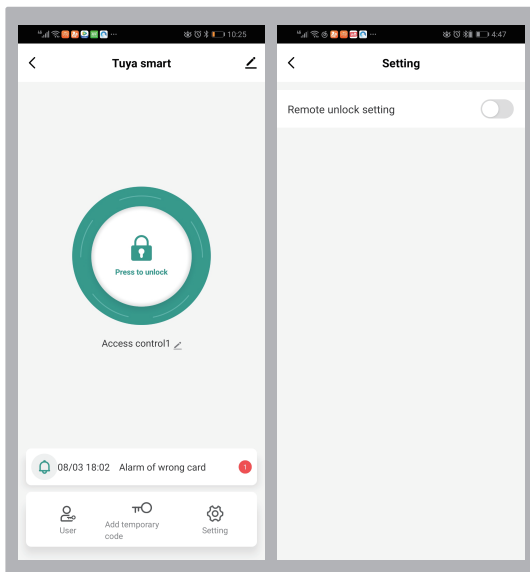


8 Press to unlock

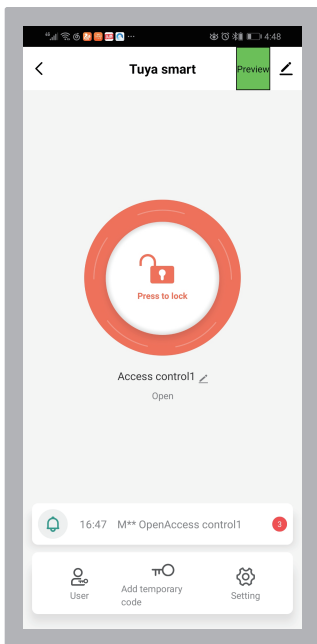


9


Select user, click “+” to add user, fill in name, click “Next step”

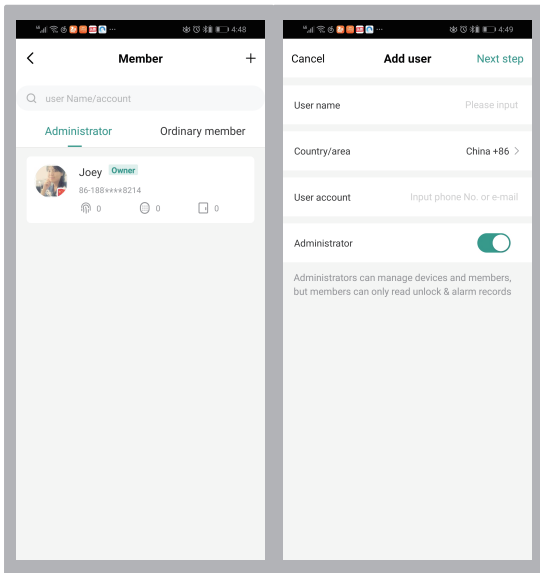

- 10 Click “Add” to add fingerprint twice , 6 digits code or card

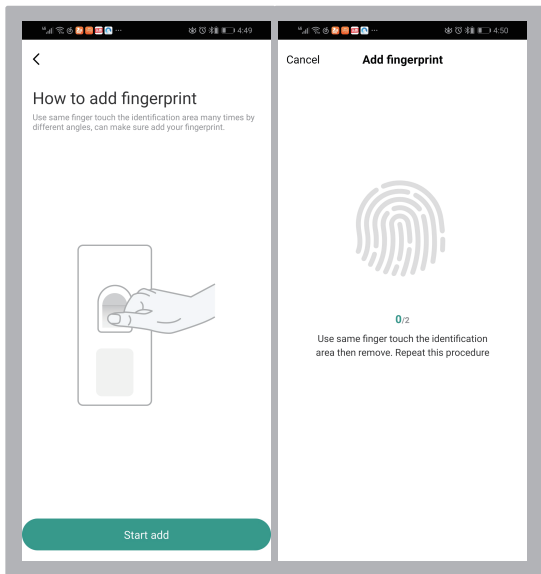

- 11 Add success, fill in fingerprint name, code name or card name, click “Done”.

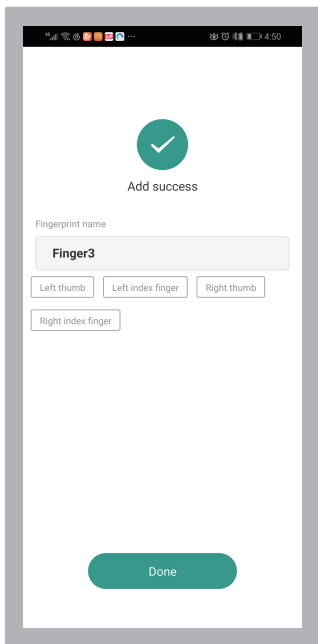

The screenshot shows a mobile application interface for adding a fingerprint. At the top, there is a status bar with various icons and the time 4:50. Below the status bar, a large green circle with a white checkmark is centered on the screen. Underneath the checkmark, the text "Add success" is displayed. Below this, the label "Fingerprint name" is followed by a text input field containing the text "Finger3". Under the input field, there are four buttons labeled "Left thumb", "Left index finger", "Right thumb", and "Right index finger". At the bottom of the screen, there is a large green button labeled "Done".

4:50

✓

Add success

Fingerprint name


Finger3

Left thumb Left index finger Right thumb


Right index finger

Done


- 12 Add code by inputting 6 digits code or clicking generated code randomly, and input the code name, then click “Save”.

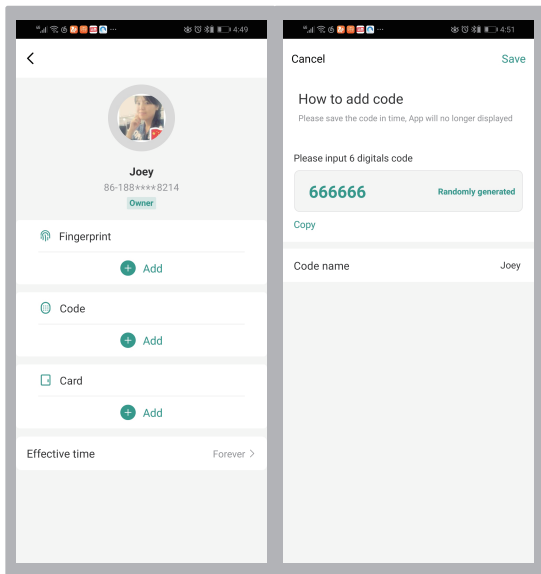

13 Add card by clicking start add

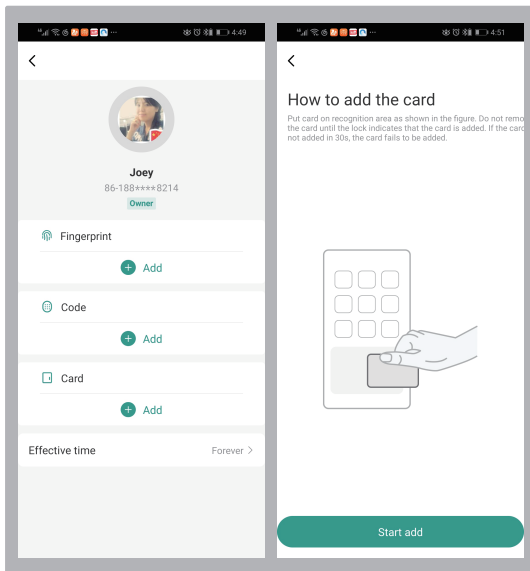

- 14 Swiping one card within 60 seconds, add card successfully, then fill card name and click “Done” .

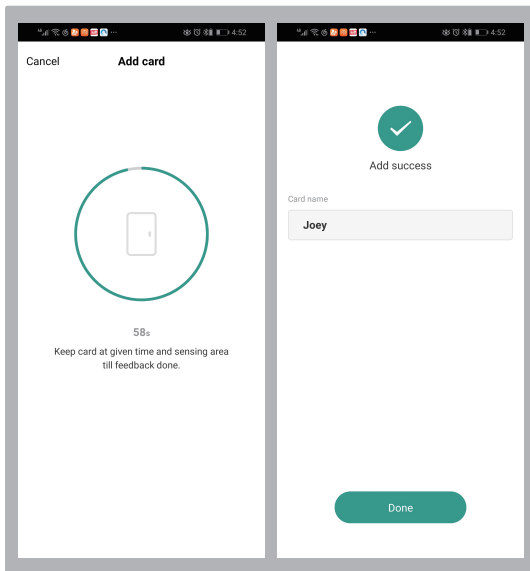

- 15 Add ordinary user by clicking ordinary member “+”, then input the related information and click “Next step”.

The image displays two screenshots from a mobile application, illustrating the process of adding a new user.


Left Screenshot: 'Add user' screen

- Header:** Cancel, Add user, Next step
- User name:** Please input
- Country/area:** China +86 >
- User account:** Input phone No. or e-mail
- Administrator:** Toggle switch is turned on.
- Description:** Administrators can manage devices and members, but members can only read unlock & alarm records

Right Screenshot: User profile for 'yoyo'

- Header:** <, Delete us...
- Profile:** yoyo, No bind account
- Authentication Methods:**
 - Fingerprint:** + Add
 - Code:** + Add
 - Card:** + Add
- Effective time:** Forever >

- 16 Add code user by clicking add temporary code cyclicity, and inputting six digits code or clicking randomly generated, then input code name

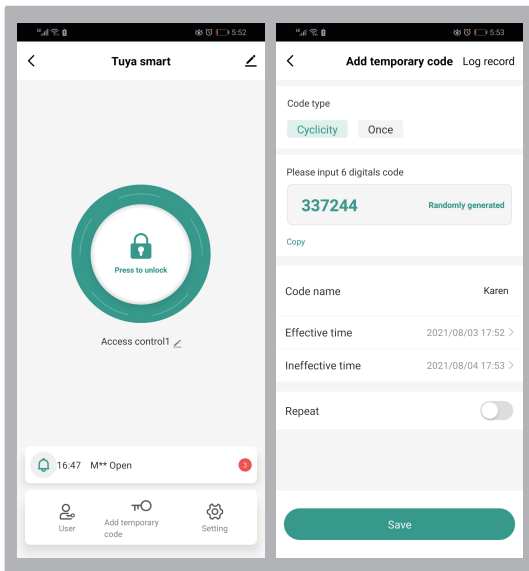


- 18** Add temporary code,click “Once”,input code name, click “Save offline code”, Done
Notice: The code valid time for 6 hours and only can be used once.

The image displays two sequential screenshots of a mobile application interface for adding a temporary code.

Left Screenshot: The screen is titled "Add temporary code" with a "Log record" link. Under "Code type", the "Once" option is selected. The "Code name" field is empty, with a "Ple" label. At the bottom, a note states "valid for 6 hours and can only be used once" above a green "Save offline code" button.

Right Screenshot: The screen shows the same title and link. The generated code "3072257164" is displayed in a large font. Below it, the same note "valid for 6 hours and can only be used once" is present. Two buttons are shown: a green "Done" button and a grey "Share" button.

19 Door opening record check

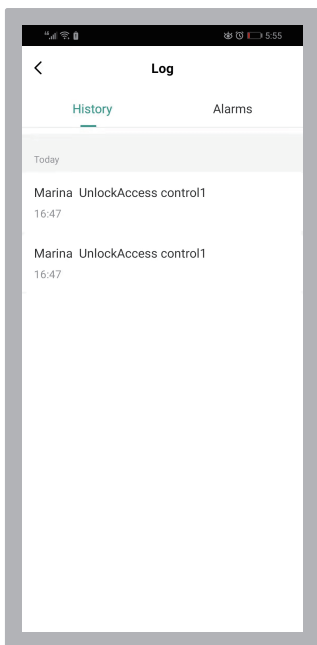

20 Alarm record check and remove alarm

